



PA SOUND MACHINE

INCLUDES:

- SPEAKER
- REMOTE
- WIRELESS MICROPHONE
- POWER CORD
- CORD TO HOOK TO COMPUTER/TV
- INSTRUCTION BOOK

NOTES:

- Speaker will be fully charged when you receive it. If you use it longer than 4 hours and need to charge, just plug in the power cord from the speaker to a normal outlet.
- To use with IPOD or Laptop, plug in USB cord/AUX Cord to back of speaker and the other end into IPOD or laptop.

FOR KARAOKE USE:

Make sure all CD's, cords, and extra microphone are returned.

***If you have any questions or problems, please call us at (574) 259-4807 for assistance. Thank you!**