



(574) 259-4807

Cotton Candy Machine Instructions

Follow these instructions to operate the machine correctly. If you have any questions about proper use please call our office and ask for assistance (574) 259-4807. If the machine does not properly operate and it is after business hours choose the operator extension and leave a message in the voicemail.

Caution:

- Only lift the machine by using the handles on each side
- The bowl and bubble should be used to cover the machine at all times
- Keep hands clear of the inner machine when the motor is running
- Turn the machine off before adding more floss sugar
- Do not use an extension cord longer than 50'

Before operating the machine

- Place the machine on a level table or in the cart provided
- Place the large plastic bowl with the hole centered on the motor and the dome on top of the bowl
- Make sure both operating switches are in the off position before plugging in the machine

To operate the machine

1. Pour the floss mix into the opening of the motor machine. Fill it about $\frac{3}{4}$ full. Do not overfill and balance the amount of sugar evenly on each side
2. Turn the main switch and the heat switch to the ON position
3. Turn the heat control knob clockwise to the maximum temperature setting
4. The machine will begin to spin the floss after a few seconds when this begins reduce the heat setting slightly

Serving the cotton candy

- Keep hands away from the spinning motor
- Use a cone to circle around the bowl wrapping the cotton candy on to the cone

*When you are finished making cotton candy rinse the bowl with warm water.