



Sno-Cone Machine Instructions

Follow these instructions to operate the machine correctly. If you have any questions about proper use please call our office and ask for assistance (574) 259-4807. If the machine does not properly operate and it is after business hours choose the operator extension and leave a message in the voicemail.

1. Fill the gooseneck with ice cubes leaving approximately 1" of room on the top.
Larger ice chunks work best
2. Turn the power switch to the ON position. Apply pressure to the handle and press down
3. Do not force the handle excessively, the machine will indicate when to stop
4. Scoop the ice and add flavor as desired

Unplug the machine when it is not being used.

Do not put anything other than ice into the machine this will cause damage which the renter will be responsible for.

Empty the machine of all ice and water before returning. Wipe down any excess water in the machine.